


Owner's Manual



TP9 SFX Semi - Auto Pistols

Cal. 9x19mm



CONTENT

Important Safety Message	3
The Rules Of The Pistol's safety	4
Basics of Safe Gun Handling	8
TP9 SFx Technical Specifications	10
Safety	12
To load the Pistol	12
To Fire the Pistol	15
Unloading the Pistol	16
Field Stripping	17
Reassembly - Sight Adjustment	18
Removal Of Rear Sight Base	19
RMR Mounting Plates	20
Installing the RMR Mounting Plate	21
Installing the Optic Sight	22
Installing the Cocking Lever	23
Magazine Release Extension Buttons	24
Cleaning the Pistol	25
Limited Lifetime Warranty	26
Limitations of Warranty	27
Product Registrations - Storage	28
TP9 SFx Exploded View	29
TP9 SFx Parts List	30

Congratulations on your purchase of the TP9 SFX Semi-Automatic Pistol. With proper care and handling, it will give you many years of long, reliable service. The TP9 SFX is chambered for the 9x19mm

We specifically disclaim any responsibility for damage or injury whatsoever, occurring as a result of the use of faulty, non-standard or remanufactured ammunition, any modifications or changes made to the firearm; improper use or unsafe handling of the firearm.

Always keep this manual with your firearm. Make sure you understand all the warnings, operation instructions and safety procedures. When you lend, give or sell the firearm, be sure this manual goes with it.

**FIREARMS SAFETY IS THE SOLE RESPONSIBILITY OF THE SHOOTER.
ALWAYS TREAT ALL FIREARMS AS IF THEY WERE LOADED AT ALL TIMES!**



IMPORTANT!

READ ALL INSTRUCTIONS AND WARNINGS IN THIS BOOKLET BEFORE USING THIS FIREARM.

IMPORTANT SAFETY MESSAGE

Children are attracted to and can operate firearms which can cause severe injuries or death. Prevent child access by always keeping gun locked, unloaded and separated from ammunition when not in use. If you keep a loaded firearm where a child obtains and improperly uses it, you may be fined or sent to prison.

Firearm Safety Depends on You

A gun is only as safe as the person operating it. You can never be overly careful when handling a firearm. Carelessness is often the cause of shooting accidents, such as failing to keep the muzzle pointed in a safe direction, not being sure of your target and what is behind it, leaving ammunition in the chamber or using improper loads. Since a bullet can never be called back once fired, such errors in gun handling can result in the loss of life, severe injury or property damage thus, it is crucial for your safety and the safety of those around you that you learn the principles of safe gun handling and storage before you begin to use your new firearm. Be a safe shooter - please read this instruction book thoroughly even if this is not your first firearm purchase as not all firearms are the same. The first step in being a safe shooter is to learn the rules for the safe operation and handling of firearms. **There is nothing more important in gun handling than safety.**

Alcohol, Drugs and Guns Don't Mix. Make No Mistake About it!

Never handle firearms after consuming alcohol or taking drugs that can affect your judgment. Shoot sober! Alcohol, certain kinds of drugs and firearms don't mix. Safe firearms handling requires alertness and concentration on one's actions. You cannot handle a firearm safely after consuming alcohol. Never consume anything that can impair your judgment or physical coordination when handling a firearm. Never allow yourself to be distracted while handling a firearm.

THE RULES OF THE PISTOL'S SAFETY

The Rules of Firearm Safety must be etched into your memory before you begin to handle firearms. These rules are intended to be understood and followed by all persons handling firearms in the field, on the range or at home. Please read, review and understand these rules before you begin to use or even take your new firearm out of its box. Remember, firearms safety depends on you! Memorizing these safety rules will help prevent gun accidents. Please study these safety rules before handling your firearm.

Rules #1

Always Keep the Muzzle Pointed in a Safe Direction

This is the most basic and most important safety rule. A safe direction is one in which an accidental discharge will not cause injury to yourself, to others or property damage. This is particularly important when loading or unloading your firearm. Never point your gun at anything you do not intend to shoot. Treat every gun as if it were loaded at all times.

Rules #2

Firearms Should Be Unloaded When Not Actually in Use

Firearms should only be loaded when you are in the field or on the target range or shooting area, ready to shoot. When not in use, firearms and ammunition should be secured in a safe place, separate from each other. Remember to unload your firearm completely so that **there is no ammunition in the chamber or magazine. Before handling this or any firearm, or handing it to someone else, Visually check the chamber and magazine to ensure they do not contain ammunition.** Always keep the gun's action open when not in use. Never assume a gun is unloaded - even if you were the last person to use it. Never cross a fence, climb a tree, wade through a stream or perform any awkward movement with a loaded gun. Never lean or place a firearm where it could fall. When in doubt, unload your gun! Never pull or push a loaded **firearm toward yourself or another person. Never carry a loaded gun in a scabbard, a holster not being worn or a gun case - common sense prevails in gun safety!**

⚠ Rules #3

Don't Completely Rely on Your Gun's Safety

Treat every gun as though it could fire at any time, even if you are not applying pressure to the trigger. The "safety" on a firearm is a mechanical device which, like any such device, can become inoperable at the worst possible time and fail to function. By mistake, you may think the safety is "ON" when it actually is not. Or you may think your gun is unloaded when there is actually a round of ammunition in it. The safety serves as a supplement to proper gun handling but cannot serve as a substitute for common sense. Never handle a gun carelessly and assume that the gun won't fire just because "the safety is on." Never touch the firearm's trigger until you are ready to shoot. Keep your fingers away from the trigger when loading or unloading. Never pull the trigger when the safety is engaged or when the safety is positioned between the "SAFE" and "FIRE" positions. Never place your finger on the trigger unless you intend to fire.

⚠ Rules #4

Be Sure of Your Target And What Is Beyond It!

Once fired, a bullet (or shot charge) can never be called back; so before you shoot, know where the bullet is going and what it will strike. Be certain your shot **will** not injure someone or strike something beyond the target. Never fire in the direction of noise, a movement or at any object you cannot positively identify. Be aware that a .22 Short bullet can travel over 1 1/4 miles. A centerfire cartridge, such as the .30-06, can send its bullet over 3 miles. Shotgun pellets can travel 500 yards and a shotgun slug has a range of over a half mile. Make sure your shot has a safe backstop such as a hillside. Keep in mind how far the bullet will travel if it misses your intended target. Never shoot at a hard surface or water as the projectile may glance or ricochet in an unpredictable direction. Once fired, a bullet can never be called back. You are responsible for your actions and judgment.

Rules #5

Use the Correct Ammunition

Every firearm is designed to use a certain caliber or gauge of ammunition. It is important that you use the correct ammunition for your firearm. Information on the correct ammunition to use with your firearm appears in the firearm's instruction manual and the manufacturer's markings on the firearm itself. Use of the wrong ammunition, improperly reloaded ammunition or corroded ammunition can result in the destruction of the firearm, serious personal injury and/or death. Form the habit of examining every round of ammunition before you put it into your gun to ensure it is of the proper gauge or caliber and that it is in good condition.

Rules #6

If Your Gun Fails to Fire When the Trigger Is Pulled, Handle With Care

If a cartridge or shell does not fire when the trigger is pulled, follow Rule #1 and keep the firearm's muzzle pointed in a safe direction. Keep the muzzle down range with the action closed and wait at least 30 seconds (to ensure that the ammunition is not delayed in firing) before carefully opening the action, unloading the firearm and safely disposing of the ammunition.

Rules #7

Always Wear Eye and Ear Protection When Shooting

Exposure to shooting noise can permanently damage hearing. Flying debris, such as powder residue and ejected cartridge cases, can injure your eyes. Thus, it is only common sense to wear both eye protection (such as shooting glasses) and ear protection (such as a sound-muffling headset) whenever shooting. Also, wear eye protection when cleaning or disassembling your gun to ensure that cleaning solvent and tensioned parts (such as springs) do not come into contact with your eyes.

⚠ Rules #8

Be Sure the Barrel Is Clear of Obstructions Before Shooting

Discharging a firearm with an obstruction in the barrel can result in personal injury, property damage and/or death. Before you load your firearm, check the chamber and magazine to ascertain that no ammunition is inside. Also, check the inside of the barrel (called the "bore") to ensure it is free of obstructions. **Even a small amount of mud, snow or excess lubricating oil or grease in the barrel can cause excessive pressures resulting in a bulged or burst barrel which can injure or kill the shooter and bystanders.** It is a good idea to make a habit of cleaning the bore and checking for obstructions with a cleaning rod just before each shooting session. If the noise or recoil experienced upon firing seems low or weak, or something doesn't feel "right," cease firing immediately and carefully check to make sure that there is no obstruction in the barrel. Placing an undersized shell or cartridge into a gun (such as a 20 gauge shell in a shotgun chambered for 12 gauge ammunition) can result in the smaller round of ammunition falling into the barrel and acting as an obstruction. When a round is subsequently fired, the barrel may burst, causing injury to the shooter and bystanders. For reference, re-read Rule #5.

⚠ Rules #9

Do Not Alter or Modify Your Gun and Have it Serviced Regularly

Firearms are complex mechanisms that are designed to function properly in their original condition. Any alterations or changes made to a firearm after its manufacture can make the gun unsafe and will void its warranty. Do not jeopardize your safety or the safety of others by altering the trigger, mechanical safety or other mechanisms of your firearm. You should have your firearm periodically checked for proper functioning and serviced by a qualified gunsmith.

⚠ Rules #10

Learn the Mechanical and Handling Characteristics of Your Firearm

Not all firearms operate the same way. The method of carrying, handling and operating firearms varies with the mechanical characteristics of each gun. Thus, you should never handle any firearm until you become familiar with the safe handling, loading, unloading and carrying procedures for that particular firearm, as well as the rules for safe gun handling in general.



LEAD WARNING!

Discharging firearms in poorly ventilated areas, cleaning firearms or handling ammunition may result in exposure to lead and other substances known to cause birth defects, reproductive harm and other serious injuries. Have adequate ventilation at all times when shooting. Wash hands thoroughly after exposure.

Basics of Safe Gun Handling

1. Always keep the muzzle pointed in a safe direction.
2. Firearms should be unloaded when not actually in use.
3. Don't totally rely on your gun's safety.
4. Be sure of your target and what is beyond it.
5. Use the correct ammunition for your firearm.
6. If your gun fails to fire when the trigger is pulled, handle with care.
7. Always wear eye and ear protection when shooting and cleaning.
8. Be sure the barrel is clear of obstructions before shooting.
9. Don't alter or modify your firearm and have your firearm(s) serviced regularly.
10. Learn the mechanics and handling characteristics of the firearm you are using.

Safe gun handling depends on you! A safe shooter is a knowledgeable shooter.

⚠ WARNING! STOP SHOOTING IMMEDIATELY AND UNLOAD YOUR FIREARM

il your firearm develops a mechanical malfunction; binding or stoppage, spitting powder/gas, a cartridge primer is punctured, a cartridge case is bulged or ruptured, or the sound on firing does not sound quite right. Do NOT try one more shot, but unload your firearm and take it and the ammunition to a qualified gunsmith or send it back to Century Arms for examination. Do not assume that the firearm is empty merely because you checked the chamber. You must also check the bore for an obstruction inside the barrel.

⚠ WARNING! Always ensure that the ammunition you are using is clean, undamaged and of the proper caliber before loading your pistol. The manufacturer and distributor of this pistol disclaim any liability for the use of remanufactured, reloaded or hand-loaded ammunition. Protect

your investment in this fine firearm by using only factory fresh, quality ammunition. The use of improper caliber or low quality ammunition could result in injury, death and/or property damage upon firing. Remember, firearms safety depends on you!

TP9SFx TECHNICAL SPECIFICATIONS

Model	TP9 SFx
Caliber	9mm
Operating System	Short Recoil Locked Breech
Fire Control	Striker SA Triaaer
Safety System	Firing Pin Block
Magazine Release	Riaht or Left Hand Adiustable
Striker Indicator	Red is visible in single action mode
Backstrap	Complete with Two sizes
Sights	Warren Tactical Adjustable Rear Sight, Fiber Optic Front Sight comes with Red and Green inserts
Rail	Standart MiL STD -1913 Pi_catinnv Rail
RMR Mounting Plates	#1 Docter, Meop ta, Insight and Vortex #2 Trijicon #3 C-More #4 Leupold, Shield, and J-Point
Overall Length	210,50mm
Height	145,50mm
Width w/o magazine catch extensions	35mm
Barrel Length	132mm
Weight without magazine	765 gr
Magazine Capacity	18-20

Diagram showing major operational parts of the TP9 SFX Semi Auto Pistol

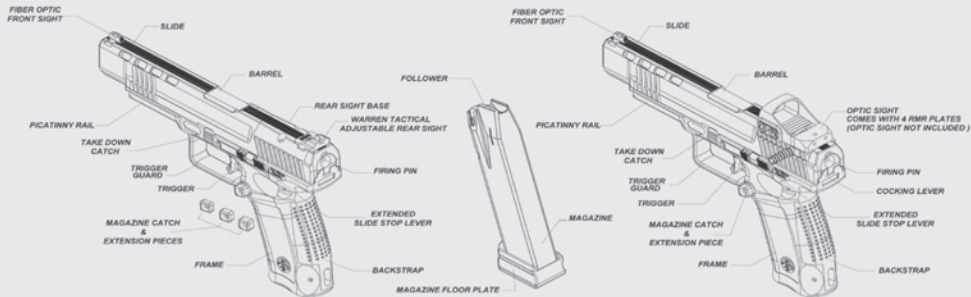


Illustration #1

The study of this picture will aid you in understanding the instructions in this booklet.

Safety:

The pistol has an internal firing pin block which prevents the firing pin from moving forward, unless the trigger is pulled. This pistol also features a trigger safety that must be fully depressed to pull the trigger.

To Load the Pistol

- ⚠ Warning!** Before loading, make sure the inside of the barrel is free of dirt or other obstructions.
- ⚠ Warning!** Always check each cartridge to ensure it is of the correct caliber and in good condition before loading the firearm.
- ⚠ Warning!** Never load a firearm indoors. An accidental discharge will cause property damage, serious injury and/or death! Never use live ammunition to function test your pistol indoors.
- ⚠ Warning!** Keep fingers away from the trigger while loading.
- ⚠ Warning!** Keep muzzle pointed in a safe direction.

1. Load the magazine with the correct ammunition by pressing the cartridges one at a time down and under the magazine's feed lips; the cartridges will automatically alternate from side to side. Holding the magazine in your primary hand and gently tapping it against your opposite palm will help seat the cartridges and assure good feeding. When loading the rounds into the magazine, ensure the base of the cartridge is in contact with the back of the magazine. (See **Illustration #2.**)
2. Keeping your finger outside the trigger guard, pick up the firearm with one hand and the magazine with the other. Insert the magazine into the magazine well, after seating the magazine pull down on it to ensure it is locked in place. (See **Illustration #3.**)



Illustration # 2



Illustration # 3

3. Grasp the slide under the rear sight and move it fully rearward and release it. As it moves rapidly forward under spring pressure, the slide will strip a round from the magazine and insert it into the chamber. **(See Illustration #4.)** The pistol is now loaded and ready to fire. **The reel striker indicator will be visible. (See Illustrations #5.)**



Illustration # 4



Illustration # 5

⚠ Warning! The pistol is now loaded and will fire if the trigger is pulled! Handle with extreme caution and keep the muzzle (the end of the barrel) pointed in a safe direction!

To Fire the Pistol


1. Keeping the **The Rules of the Pistol's Safety** in mind, aim the pistol downrange at the target. When firing this pistol you may need to experiment with different shooting styles until you find the method which best suits your sporting activity. Remember to always fire the pistol in such a manner that you can maintain a safe muzzle direction at all times.
2. If the pistol is decocked; to reset the single action feature, keeping the muzzle pointed in a safe direction, grasp the rear of the slide and move it rearward approximately 1/4" which will set the pistol into single action mode. Align your sights on the target.
3. Place your finger inside the trigger guard and on the trigger. Slowly pull the trigger while depressing the trigger safety fully and continue pulling until the striker releases.
4. Being a semi-automatic pistol, the pistol's action (its moving parts) will cycle after the first round is fired. As the slide moves rearward, the extractor will pull the empty cartridge case from the chamber and eject it from the pistol. (Make sure there are no bystanders in close proximity on either side of the pistol who could be injured by the ejected cartridge case or gasses expelled from the pistol.) **NOTE: it the trigger is pressed again, the pistol will fire! Keep the pistol pointed in a safe direction. Keep your fingers away from the muzzle when firing the gun.**
5. Firing may be continued in this manner until the magazine is empty.

⚠ Warning! The barrel will be very hot after firing!

⚠ Warning! Keep all parts of your body away from the muzzle!

⚠ Warning! Always unload your pistol immediately after use and prior to cleaning and storage to minimize the risk of an accidental discharge. If your pistol ever fails to fire keep it pointed at the target for at least 30 seconds in the event of a hang fire (slow ignition). If the round still does not fire, remove the magazine, eject the cartridge by carefully opening the slide and discard the bad round. Reload the pistol to resume firing.

Unloading the Pistol

 **Warning!** Keep muzzle pointed in a safe direction.

1. While keeping the pistol pointed in a safe direction. Hold the pistol with one hand, depress the magazine release button with your thumb and the magazine should fall into your free hand. **(See Illustration #6.)**
2. Grasp the slide under the rear sight and move it fully rearward, holding the slide fully open inspect the chamber to ensure it is empty.
3. Allow the slide to go forward on the empty chamber. Pull the trigger to lower the striker. Note: When the striker is lowered, the red striker indicator is not visible. **(See Illustration # 5).**

- ⚠ Warning!** The pistol **will** fire if the magazine is removed and if the trigger is pulled when a cartridge is in the chamber.
WARNING! If dropped, any firearm could fire when there is a cartridge in the chamber.

Field Stripping

- ⚠ Warning!** Before beginning the disassembly process, check to ensure the pistol is not loaded. To do so, follow the procedures detailed in the Unloading the Pistol section on **page 16**
- 🧑‍🚒 Warning!** Wear eye protection, such as shooting glasses or goggles, when disassembling your firearm to protect your eyes from tensioned parts, such as springs that could be dislodged during disassembly.
1. Before beginning, remove all live ammunition, loaded magazines and other firearms from the working area. Remove the magazine from the pistol. To do so, follow the procedures detailed in the Unloading the Pistol section on **page 16** and confirm the chamber is empty.
 2. While remembering to maintain a safe muzzle direction, secure the unloaded pistol firmly in a supported location such as your lap, or on a table. Pull the trigger to lower the striker. Note: When the striker is lowered, the red striker indicator is not visible. **(See Illustration #5.)**
 3. While holding the pistol in your primary hand, grasp the take down catches, located above the trigger. Pull them down using your thumb on your primary hand to push the slide forward. **(See Illustration #7) and (See Illustration #8)** once the slide has moved forward take your secondary hand and remove the slide from the frame.
 4. Holding the slide with your primary hand, use your secondary hand to push the recoil spring toward the muzzle and lift it free. Lift the barrel slightly and push it forward toward the muzzle. Then you can pull it back and lift it free from the slide.

Illustration # 6



Illustration # 7



Illustration # 8



Reassembly

1. Hold the slide in your primary hand with the muzzle side facing the ground. Drop the barrel into the slide, turn the slide up so that the muzzle is facing the sky the barrel will slide into place.
2. While holding the slide in your primary hand, place the recoil spring in the muzzle end of the slide. **NOTE: The flat end of the recoil spring must be facing the chamber. (See Illustration #9.)** Use your thumb on your secondary hand to press the spring towards the muzzle and slightly down.
3. Line the slide grooves up with the frame and slide them back together.



Illustration # 9

Sight Adjustment

1. The rear sight is drill windage adjustable. For bullet hits to the right of point of aim (POA), move the rear sight left. For bullet hits left of POA, move rear sight right.
2. The front sight is also drill windage adjustable as the rear sight.

⚠ Warning! Before beginning the disassembly process, check to ensure the pistol is not loaded. To do so, follow the procedures detailed in the Unloading the pistol section on **page 16**.

⚠ Warning! Wear eye protection, such as shooting glasses or goggles, when disassembling your firearm to protect your eyes from tensioned parts, such as springs that could be dislodged during disassembly.

REMOVAL OF REAR SIGHT BASE

1. Before beginning remove all live ammunition, loaded magazines and other firearms from the working area. Remove the magazine from the pistol. To do so, follow the procedures detailed in the Unloading the pistol section on **page 16** and confirm the chamber is empty. **Illustration # 11**

2. Holding the pistol as shown in **Illustration #10**. Use a 2mm allen wrench to remove the rear sight base screws.

3. After removing the rear sight base screws with lock washers, lift the sight base out as shown in **Illustration #11**.

Please note as the base fits extremely tight, you may need to follow the directions under Field Stripping on **page 17**, to remove the slide. once the slide has been removed use the 2mm allen wrench in the screw hole pictured in **Illustration #12** and push to unseat the rear site base. Prying the rear site base off may damage the base and/or the slide.



Illustration # 10



Illustration # 11



Illustration # 12

RMR MOUNTING PLATES

Your TP9SFx comes complete with four of the most popular RMR mounting plates numbered 1 through 4 (see **Illustration #13**).

The set includes a 2mm allen wrench, two mounting screws and two spare screws for the mounting plates.

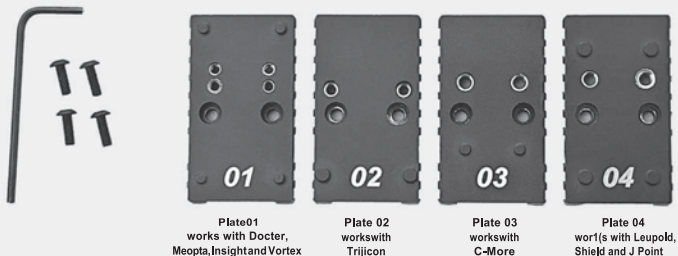


Illustration # 13

Please only use the mounting screws that are included with your pistol to mount the bases.

INSTALLING THE RMR MOUNTING PLATE

1. Insert the mounting plate as shown in **Illustration # 14**. Using the mounting plate screws that come with your pistol, tighten the screws to 1 Nm (see **Illustration #15**).



Illustration # 14



Illustration # 15

INSTALLING THE OPTIC SIGHT

Install the sight, making sure it fits properly into the sockets for your sight as shown in **Illustration #16**. Please only use the mounting screws that are included with your pistol to mount the bases.



Illustration # 16



Illustration # 17

INSTALLING THE COCKING LEVER

1. Screw the cocking lever into its socket located on the side of the RMR mounting plate as shown in **Illustration #18 & #19**. The cocking handle can be mounted for either right or left handed operation. By using a screw driver as shown in the **Illustration #19**, tighten the cocking lever.



Illustration # 18



Illustration # 19

MAGAZINE RELEASE BUTTON EXTENSIONS

Your pistol comes with three different size magazine release button extensions (small - medium - large). Select the size magazine release extensions that best suits your needs. Remove the screw using the included 2 mm allen wrench, insert the release **Illustration #20** and screw **Illustration #21** and tighten the screw.



Illustration # 20



Illustration # 21

Cleaning and Maintenance

- ⚠ **Warning!** Before beginning the cleaning process, check to ensure the pistol is unloaded. (See the **Unloading the Pistol** section on page 16)
 - ⚠ **Warning!** You should wear eye protection, such as shooting glasses or goggles, when cleaning your firearm to protect your eyes from tensioned parts, such as springs, that may become dislodged during disassembly.
1. Obtain a quality cleaning kit and thoroughly review the manufacturer's instructions.
 2. Follow the pistol field stripping procedures. (See page 17)
 3. To clean the barrel, select the correct caliber cleaning brush and attach it to a cleaning rod.
 4. Dampen the brush with cleaner, lubricant, protectant (CLP) and then push/pull the brush through the barrel several times from the chamber to the muzzle.
 5. Remove the brush and attach a correctly sized cloth cleaning patch to the cleaning rod and push it through the barrel several times to remove loosened fouling.
 6. Repeat this process with the brush and cleaning patches until a final patch comes out clean after swabbing the bore. Apply light coating of CLP to the outer surface of the barrel.
 7. Remove shooting residue from the slide and barrel's action parts by the brush and cloth supplied. Apply light coating of CLP to the rails, trigger bar and inside of the ejector assembly of frame and rail on the slide, firing pin block together with the slide's inner side where the barrel operates.
 8. Finally, wipe down all outer surfaces with a soft cloth dipped in a good quality gun oil.

▲ Lubrication Warning

Firing a firearm with oil, grease or any other material even partially obstructing the bore may result in damage to the firearm and injury to the shooter and those nearby. Do not spray or apply lubricants directly on ammunition. If the powder charge of a cartridge is affected by the lubricant, it may not be ignited, but the energy from the primer, may be sufficient to push the bullet into the bore where it may become lodged. Firing a subsequent bullet into the obstructed bore will damage the firearm and may cause injury to the shooter and those nearby. Use lubricants properly. You are responsible for the proper care and maintenance of your firearm and ammunition.

▲ Warning Concerning Alterations and Aftermarket Parts!

Altering or modifying parts and/or internal safeties is dangerous and will void the warranty. This firearm was manufactured to perform properly with the original parts and accessories as designed. It is *your* duty to make sure any parts you buy are made *for* this firearm and are installed correctly and that neither the replacements nor originals are altered or changed. Your gun is a complex precision tool with many parts that must relate correctly to other parts in order for proper and safe operation. Putting a gun together wrong or with incorrect or modified parts can result in a damaged gun, danger, and injury or death to you and others through malfunction. Always have a qualified gunsmith work on your gun or at least check any work not performed by a gunsmith.

Limited Lifetime Warranty

Congratulations on purchasing your Canik Century Arms TP9 SFX Century Arms prides itself on being only certified service provider of TP9 SFX pistols in the USA. Pursuant to Canik's Limited Lifetime Warranty Policy, Century Arms will repair defects in material or workmanship associated with the firearm without charge to the original purchaser for as long as you own the handgun. (This agreement is not transferable; its benefits apply only to the original real purchaser. Firearm accessories are not covered under this policy.)

Please send a copy of the Product Registration Form within the 30 days upon purchase to register your pistol with Canik and Century Arms. You can download this form from www.centuryarms.com. Proof of purchase, including a receipt or invoice, must be provided with your registration. Forms can be submitted either by certified or registered mail or by email to the addresses provided on the form.

To make a repair claim, contact Century Arms at: 430 South Congress Ave, Suite 1, Delray Beach, FL 33445.

Email: Support@centuryarms.com or call (561) 265 – 45 00 for instructions on how to return your pistol. Do not return your TP9 SFX pistol for service without prior authorization.

When contacting customer service, please have the owner's name, address, model and serial number available. This information will help the service representative to expedite your request.

Limitations Of Warranty

The Canik warranty will be void if any of the following occur:

1. The product is not properly registered;
2. The instructions in the manual are not followed;
3. Your TP9 SFX pistol or any of its parts are altered or modified from their original state;
4. **Damage is caused by misuse, abuse or improper maintenance;**
5. Your TP9 SFX pistol is disassembled beyond the instructions in the manual;
6. Reloaded, remanufactured, or hand-loaded ammunition, or ammunition of a different caliber than your TP9 SFX pistol is used; or
7. TP9 SFX used for range rentals or other similar programs not eligible.

To the full extent permissible by applicable law, Century Arms, Canik and their employees, agents, distributors and partners do not make and are not entitled or authorized to make, any warranty of any kind, express or implied, with respect to the TP9 SFx pistol, INCLUDING WITHOUT LIMITATION ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. The only limited warranty provided form Canik, pursuant to terms and limitations stated herein. Nothing contained herein shall be interpreted as an implied or express warranty on behalf of Century Arms or as an implied or express warranty by Canik the terms above.

Product Registrations

You can register your TP9 SFx by downloading the Product Registration form from www.centuryarms.com

Storage

Your pistol should be thoroughly cleaned and lightly lubricated before being put away for storage. A light coating of good quality gun oil should be applied to all exposed surfaces. Remove all excess lubrication and use a cleaning rod and cleaning patch to make sure that the bore (the inside of the barrel) is dry and free of obstructions when you remove your pistol from storage and before firing it. CHECK TO ENSURE THAT YOUR PISTOL IS NOT LOADED BEFORE STORING IT. ALWAYS STORE FIREARMS AND AMMUNITION SEPARATE FROM EACH OTHER AND OUT OF REACH OF CHILDREN. ALWAYS SECURELY LOCK YOUR FIREARMS AND AMMUNITION IN SEPARATE LOCATIONS WHEN NOT IN USE. REFERENCE YOUR HOME STATE'S FIREARMS REGULATIONS FOR SAFE STORAGE OF FIREARMS AND AMMUNITION.

NOTE: The use of reloaded, remanufactured, hand-loaded or other non-standard ammunition may result in damage to the pistol and injury or death to the shooter and/or bystanders. The manufacturer does not accept responsibility for malfunctions resulting from use of such ammunition.

TP9SFx Exploded view



CANIK TP9 SFx EXPLODED VIEW AND PARTS LIST

PATP002E-TP-9 SFx Grey Bad. Strap (SM)
PATP002F-TP-9 SFx Grey Back Strap (LG)
PATPO0JA-TP-9 SAJ V2 / SF/ SFx Back Strap Pin
PATP004A-TP-9 SFx Magazine Catch Set
PATP004B-TP-9 SFx Magazine Release Button Saew
PATP004C-TP-9 SFx Magazine Release Button Small
PATP004D-TP-9 SFx Magazine Release Button Medium
PATP004E-TP-9 SFx Magazine Release Button Large
PATP005-TP-9 Ali Models Magazine Catch Spring
PATPO0O-TP-9 Ali Models Locking Block
PATP007-TP-9 Ali Models Locking Lever
PATP008-TP-9 Ali Models Locking Lever Spring
PATP009-TP-9 Ali Models Take Down Catch
PATP010-TP-9 Ali Models Take Down Catch Piece
PATP011-TP-9 Ali Models Take Down Catch Pin
PATP012A-TP-9 SA/V2/ SFI SFx Locking Lever Pin
PATP013A-TP-9 SA/ V2/ SFI SFx Trigger Pin
PATP014-TP-9 SA/ SF/ SFx Trigger
PATP015-TP-9 SA/ SF/ SFx Only Trigger Safety Lever
PATP015A-TP-9 SA/ SFI SFx Only Trigger Safety Lever Pin
PATP016-TP-9 SA/ SFI SFx Only Trigger Safety Lever Spring
PATP017A-TP-9 SFx Slide Stop Lever
PATP016-TP-9 Ali Models Slide Stop Spring
PATP019-TP-9 Ali Models Ejector
PATP019F-TP-9 Ali Models Ejector Assembly (Schematic Parts #18-23,26)

PATP020-TP-9 Ali Models Sear
PATP021-TP-9 AH Models Sear
Spring PATP022-TP-9 Ali Models Sear
Pin PATP023A-TP-9 SF/ SFx Sear
Lever
PATP024-TP-9 Ali Models Sear Lever Spring
PATP025-TP-9 Ali Models Ejector Pin
PATP026-TP-9 Ali Models Ejector Pin
PATP027-TP-9 SAJ SF/ SFx Trigger Bar
PATP028-TP-9 SN SF/ SFx Trigger Spring
PATP029A-TP-9 SN SF/ SFx Trigger Bar Pin
PATP030C-TP-9 SFx Only Slide
PATP031-TP-9 SN SF/ SFx Firing Pin Block Spring
PATP032-TP-9 Ali Models Firing Pin Block
PATP033-TP-9 Ali Models Extractor Pin Spring
PATP034-TP-9 Ali Models Extractor Pin
PATP035-TP-9 Ali Models Extractor Spring
PATP036-TP-9 Ali Models Extractor
PATP037-TP-9 Ali Models Firing Pin Cotlet
PATP036-TP-9 Ali Models Firing Pin Return Spring
PATP039-TP-9 Ali Models Firing Pin
PATP039A-TP-9 Ali Models Firing Pin Assembly (Schematic Parts #37-41)
PATP040-TP-9 Ali Models Firing Pin Spring
PATP041-TP-9 Ali Models Firing Pin Retainer
PATP044-TP-9 AH Models Slide Retaining Plate

PATP045E-TP-9 SFx Only Rear Sight
PATP045F-TP-9 SFx Rear Sight Base
PATP045G-TP-9 SFx Rear Sight Base Saews (2)
PATP045H-TP-9 SFx RMR Mounting Plate #01
PATP045J-TP-9 SFx RMR Mounting Plate #02
PATP045K-TP-9 SFx RMR Mounting Plate #03
PATP045M-TP-9 SFx RMR Mounting Plate #04
PATP045N-TP-9 SFx Cocking Lever
PATP045P-TP-9 SFx Lock washers (4)
PATP0468-TP-9 SFx Rear Sight Mounting Screw (1)
PATP047C-TP-9 SF/ SFx Ali Pistols V2 SA from Serial # Front Sight
PATP0470-TP-9 SFx Front Sight Fiber Optic Insert - Green
PATP047E-TP-9 SFx Front Sight Fiber Optic insert - Red

PATPOSOO-TP-9 SFx Recoil Spring Guide Assembly (Schematic Parts #50 -52)
PATP050E-TP-9 SFx Recoil Spring Guide
PATP051A-TP-9 SFx Recoil Spring Guide Stop
PATP052-TP-9 Ali Models Recoil Spring
PATP053-TP-9 Ali Models Magazine Body
PATP054-TP-9 Ali Models Magazine Follower
PATP055-TP-9 Ali Models Magazine Spring
PATP056A-TP-9 SFx 20 Rd Floorplate Lock
PATP057C-TP-9 SFx Floorplate (Grey)

Not:

.....

.....

.....

.....

.....

.....

.....

.....

.....

Not:

.....

.....

.....

.....


.....

.....

.....

.....

.....



ISO-9001



PRODUCTION PERMIT



FACILITY SECURITY



AQAP-2110



**CENTURY
ARMS**

TP9 SFx Semi - Auto Pistols,

Cal. 9x19mm

Distributed by: Century Arms

236 Bryce Boulevard, Fairfax, VT 05454

www.centuryarms.com

Sales Tel: 1.800.527.1252 - 1.561.265.4530

Sales Fax: 1.561.265.4520

C55.53-KK-EN-17-11